

# Installer menu settings

## RS485 parameters for energy meter Carlo Gavazzi series 1; series 2; series 3

*Note: Energy meter parameters should match EVSE default parameters.*

RS485 parameter	EVSE default parameter value (configurable in mobile app)
Modbus adress	1
Baud rate	9600
Parity	None
Stop bits	1