

Installer menu settings

RS485 parameters for energy meter Carlo Gavazzi series 1; series 2; series 3

Note: Energy meter parameters should match EVSE default parameters.

| RS485 parameter | EVSE default parameter value (configurable in mobile app) |
|-----------------|--------------------------------------------------------------|
| Modbus adress | 1 |
| Baud rate | 9600 |
| Parity | None |
| Stop bits | 1 |