

https://wiki.teltonika-energy.com/view/Lower_voltage_tolerance

Lower voltage tolerance

Lower voltage tolerance

There is possibility to change the tolerance limit for lower voltage threshold. This can be used in the sites where voltage fluctuation is big.

By default this setting is set to 10 %