

[https://wiki.teltonika-energy.com/view/Lower\\_voltage\\_tolerance](https://wiki.teltonika-energy.com/view/Lower_voltage_tolerance)

# Lower voltage tolerance

## Lower voltage tolerance

There is possibility to change the tolerance limit for lower voltage threshold. This can be used in the sites where voltage fluctuation is big.

*By default this setting is set to 10 %*