

https://wiki.teltonika-energy.com/view/Temperature_warning

Temperature warning

Temperature warning

There is a possibility to increase temperature warning level. When charger reaches this temperature level, it starts to ventilate itself by decreasing charging power. If Charger reaches 80°C it turns off relays and stops charging process.

By default this setting is set to 60 °C