

[https://wiki.teltonika-energy.com/view/Three\\_phase\\_charging](https://wiki.teltonika-energy.com/view/Three_phase_charging)

# Three phase charging

## Three phase charging

There is possibility to run 3-phase charging station on 1-phase only. This is manual limitation. For example, if this option is turned ON and your EV can charge only via 1-phase, TeltoCharge will automatically will use only 1-phase.

*By default this setting is set to ON*