

[https://wiki.teltonika-energy.com/view/Upper\\_voltage\\_tolerance](https://wiki.teltonika-energy.com/view/Upper_voltage_tolerance)

# Upper voltage tolerance

## Upper voltage tolerance

There is a possibility to change the tolerance limit for upper voltage threshold. This can be used in the sites where voltage fluctuation is recurring.

*By default this setting is set to 10 %*