

[https://wiki.teltonika-energy.com/view/Use\\_neutral\\_as\\_phase](https://wiki.teltonika-energy.com/view/Use_neutral_as_phase)

# Use neutral as phase

## Use neutral as phase

This function allows user to use electrical network without Neutral wire. L1 then must be connected to N(L1) pin in input terminal.

*Global product: By default this setting is turned OFF*