

# Warnings meaning

## WARNINGS

### Warning message

Simple CP detected	Temperature warning	Ventilation required	RTC time lost	Simplified CP denied	D state denied	Sensors not calibrated	Energy meter comm error	NFC init error	Low battery voltage	Emeter wrong type	E-meter unidentified	Main Board boot fail
--------------------	---------------------	----------------------	---------------	----------------------	----------------	------------------------	-------------------------	----------------	---------------------	-------------------	----------------------	----------------------

### Meaning

Connected EV uses Simplified charging sequence. Charging power is limited to 1 Phase 10 A;	Temperature higher than warning limit, current throttling is present.	EV requiring ventilation	EVSE date and time lost	Simplified CP detected and not allowed	EV requiring ventilation but charging location is not ventilated	Sensors were not calibrated during HW configuration	Energy meter communication error	NFC initialization error	Low battery voltage EVSE (RTC)	Energy meter configuration mismatch	Energy meter type unidentified	Main board is failing to boot
--------------------------------------------------------------------------------------------	-----------------------------------------------------------------------	--------------------------	-------------------------	----------------------------------------	------------------------------------------------------------------	-----------------------------------------------------	----------------------------------	--------------------------	--------------------------------	-------------------------------------	--------------------------------	-------------------------------

### What to do to avoid

Connected EV uses Simplified charging sequence. Charging power is limited. In installer menu option "Simplified charging sequence" must be turned ON.	Check if Charging location is sufficiently ventilated	Check EVSE coin battery (CR 1220)	Connected EV uses Simplified charging sequence. Simplified CP charging is disabled in Installer menu.	EV requiring ventilation, but Charging location is specified as not ventilated in Installer menu.	Contact support.	Check RS485 connection with external meter. Inspect cable. Check if meter is working. Make sure devices are configured properly.	Reboot charger and check if the issue remains.	Connected EVSE configured coin battery (CR 1220). Installer menu are different.	Unknown device detected. Check if the energy meter is compatible.	Reboot charger and check if the issue remains - contact support.
-------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------	-----------------------------------	-------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------	------------------	----------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------	---------------------------------------------------------------------------------	-------------------------------------------------------------------	------------------------------------------------------------------

This LED shows that there is an active warning in the charger. This warning indication will work with other indications. If issues still persist, report it via VIP helpdesk or your sales manager. **(Note:** please provide as much information as you can about your issue (photos, videos, etc..) this helps to solve it faster.