

Charger location is ventilated

Charging location is ventilated

There are electrical vehicles which requires ventilation (charging is done on state D), because they use lead batteries and it is of great importance to ventilate them.

If EV sends signal to go to state D, but charger is not installed outside and this parameter is set to „NO“ - charging will not be started.

If TeltoCharge is installed outside, set this setting to *YES*.

By default this setting is set to NO