

[https://wiki.teltonika-energy.com/view/Supply\\_voltage](https://wiki.teltonika-energy.com/view/Supply_voltage)

# Supply voltage

## Supply voltage

- Installer can change supply voltage (*voltage between phase and neutral wires*)
- Different regions can have different supply voltages, so installer can set this value accordingly to the used voltage in the individual site;

*Global product: By default this setting is set to 230 V*