

[https://wiki.teltonika-energy.com/view/Temperature\\_warning](https://wiki.teltonika-energy.com/view/Temperature_warning)

# Temperature warning

## Temperature warning

There is a possibility to increase temperature warning level. When charger reaches this temperature level, it starts to ventilate itself by decreasing charging power. If Charger reaches 80°C it turns off relays and stops charging process.

*By default this setting is set to 60 °C*