

https://wiki.teltonika-energy.com/view/Upper_voltage_tolerance

Upper voltage tolerance

Upper voltage tolerance

There is a possibility to change the tolerance limit for upper voltage threshold. This can be used in the sites where voltage fluctuation is recurring.

By default this setting is set to 10 %