

https://wiki.teltonika-energy.com/view/Use_neutral_as_phase

Use neutral as phase

Use neutral as phase

This function allows user to use electrical network without Neutral wire. L1 then must be connected to N(L1) pin in input terminal.

Global product: By default this setting is turned OFF