

[https://wiki.teltonika-energy.com/view/Use\\_prefered\\_phase](https://wiki.teltonika-energy.com/view/Use_prefered_phase)

## **Use prefered phase**

there is an ability to use preferred phase while dynamic load balancing is on and charging Is done on the single phase, otherwise the least loaded phase will be used.